


# EPSON®

## Printing Arch D True to Size (LFP)

### 1.0

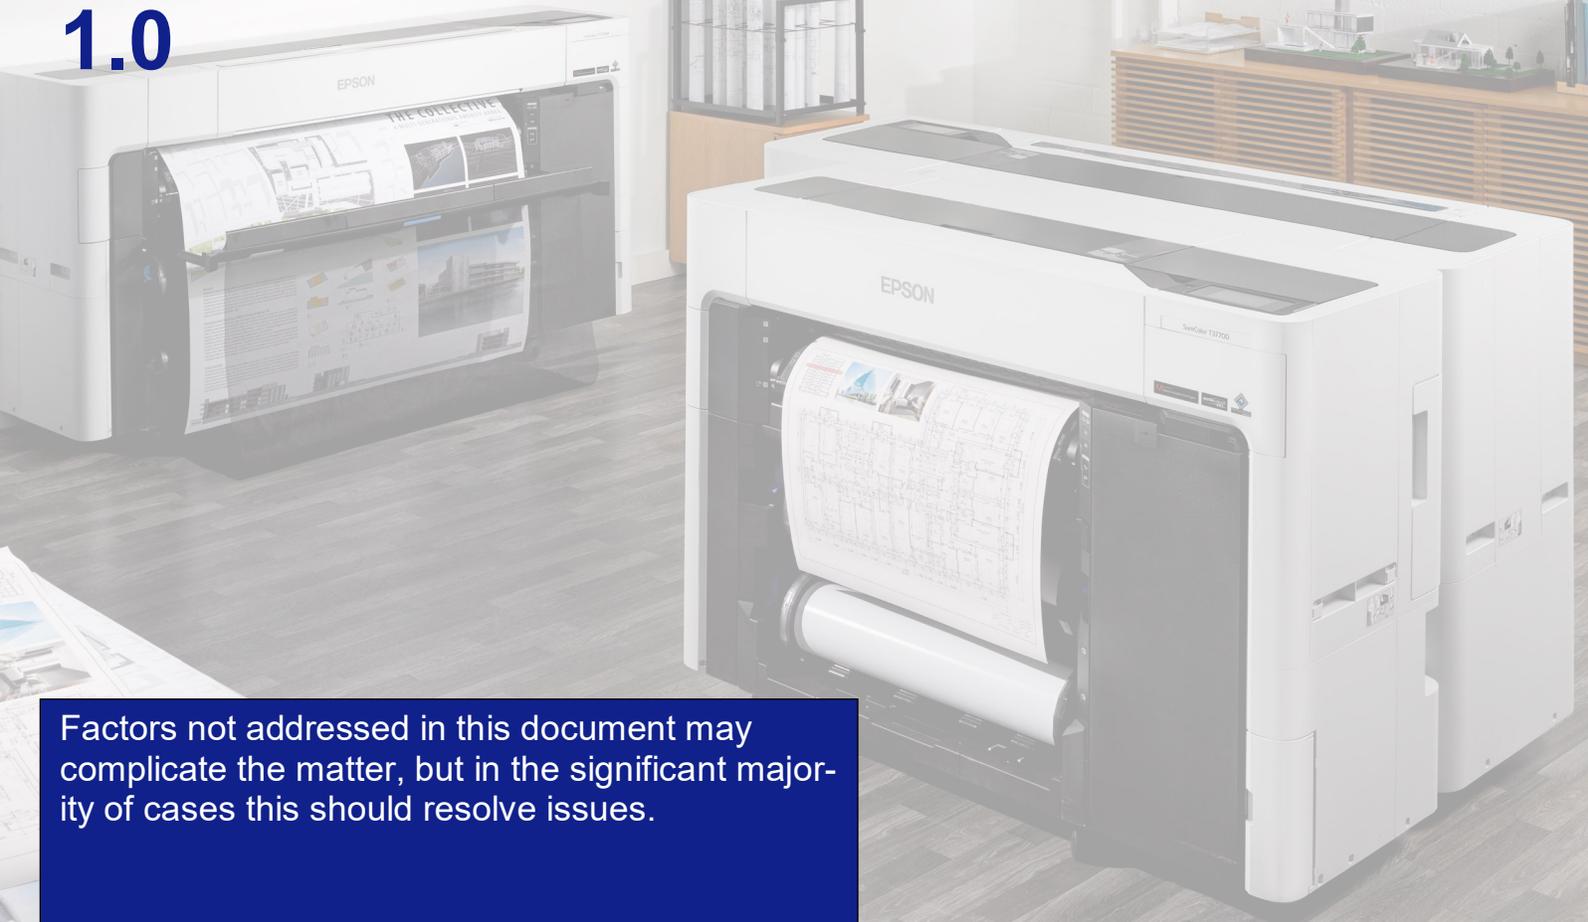

Factors not addressed in this document may complicate the matter, but in the significant majority of cases this should resolve issues.

This document covers how to print an Arch D (24" x 36") print that measures 24" x 36" without adding or removing media causing the width or depth to over or under-cut the intended print size.

Date: 8/29/2024

# EPSON®



If you are looking to print a job that measures precisely 24" x 36" this document will help you achieve that. Arch D (24" x 36") is the given example, but these setting should be used to get output on other arch sizes as well.

First in the driver select the following settings:


- Document Size to 24 x 36 in
- Select Reduce/Enlarge and choose retain scale of document.
- Confirm output size matches document size.

Using Standard driver: select target make sure to choose Cad/Line drawing or GIS (**Do not use standard/Poster, ICM, or other as all will add additional margin**).

Using Postscript driver: select target make sure to choose GIS or CAD (**Do not use standard as it will add additional margin**).

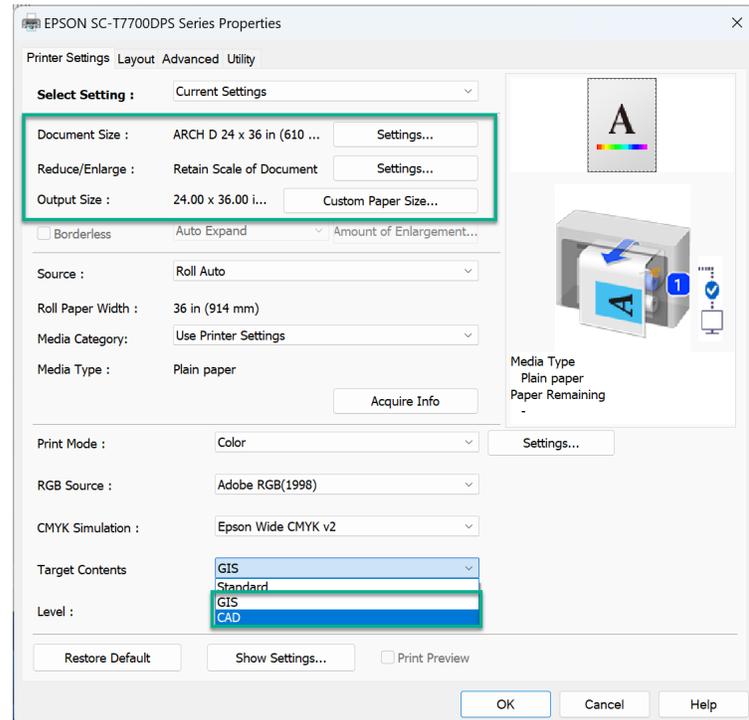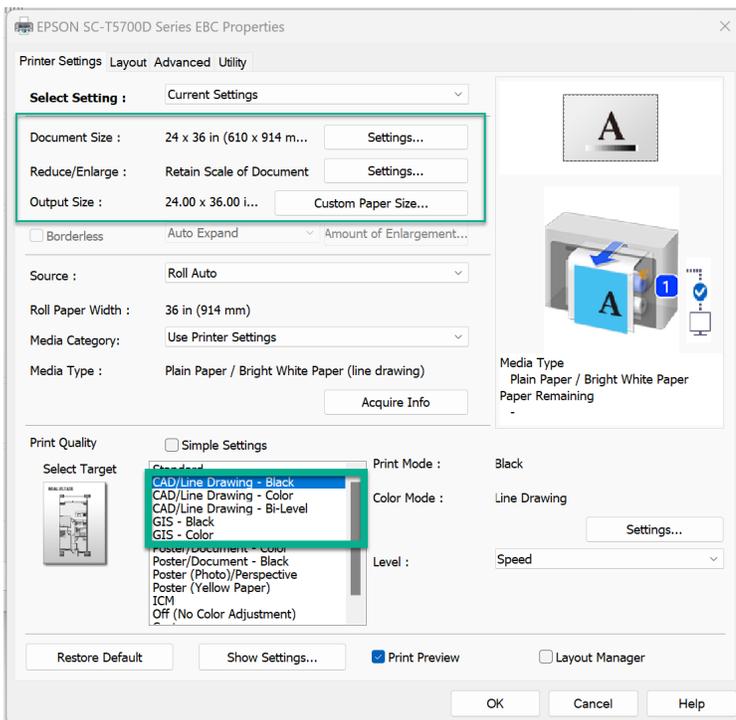

Ensure save roll paper is not enabled, otherwise your roll may cut short. This page should look nearly identical on both drivers.

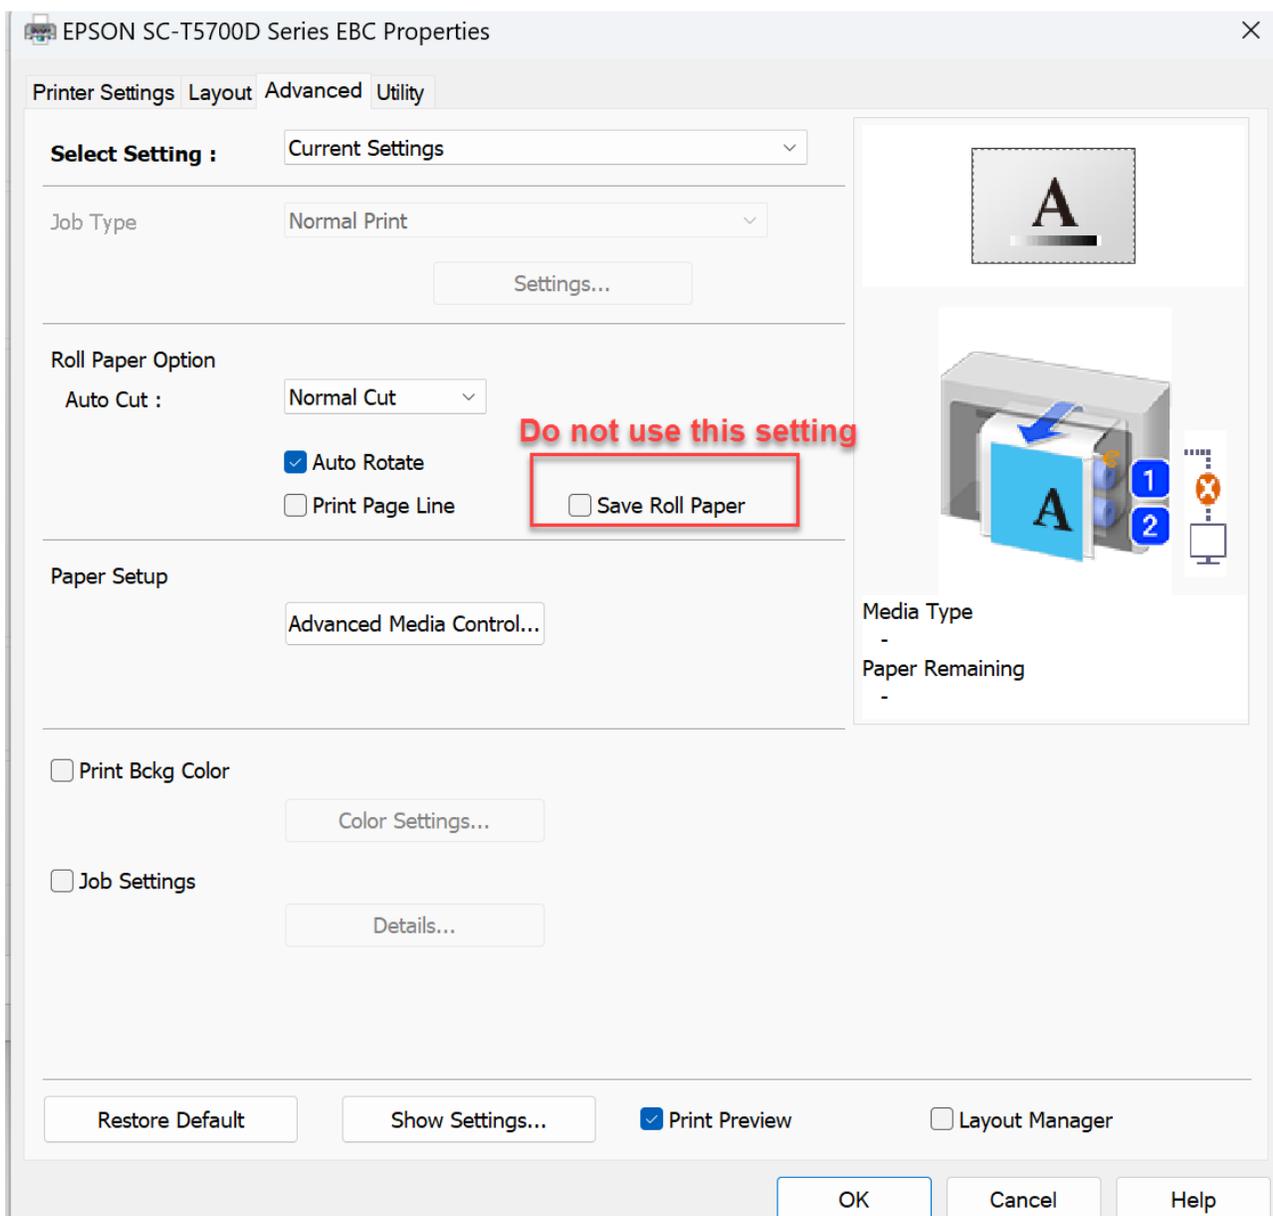

Another important note in terms of printing to scale/not clipping or cropping your job, is that your job is also built to scale/ 24"x36".

Print

Printer: EPSON SC-T5700D Series EBC Properties Advanced [Help ?](#)

Copies: 1  Print in grayscale (black and white)  Save ink/toner ⓘ

Pages to Print  
 All  Current  Pages 1  
▶ More Options

Page Sizing & Handling ⓘ  
Size Poster Multiple Booklet  
 Fit  Actual size  
 Shrink oversized pages  Custom Scale: 100 %  
 Choose paper source by PDF page size

Orientation:  
 Auto  Portrait  Landscape

Comments & Forms  
Document Summarize Comments

Page Setup...


Document: 24.0 x 36.0in  
24 x 36 Inches  
**MAKE SURE DOCUMENT IS PROPER SIZE.**

Page 1 of 1

Print Cancel

We also recommend setting these as your defaults or a preset if used frequently.

Once all settings are selected, choose custom settings

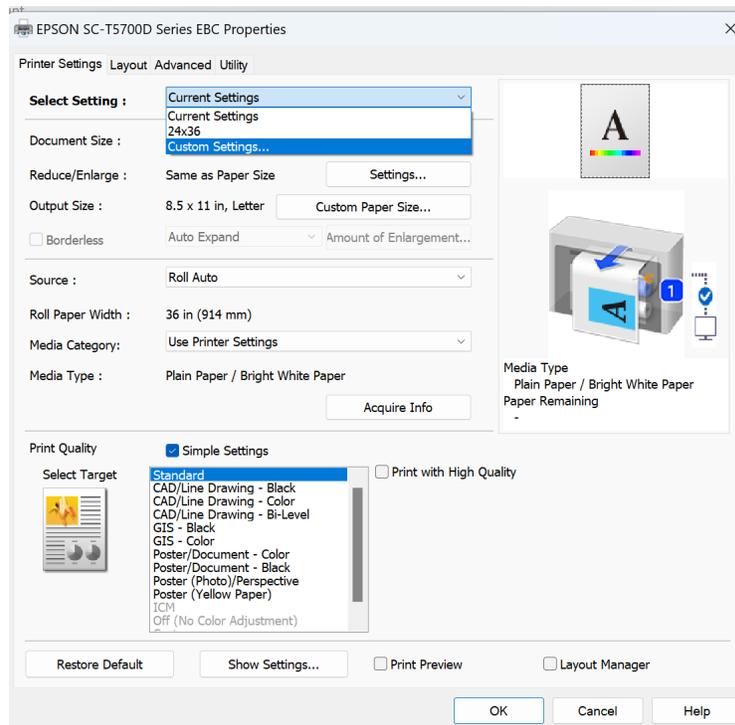

Name your settings then save them, and it will be available in the preset as a drop down option.

